



# 3M™ 9320 Dust / Mist Respirator

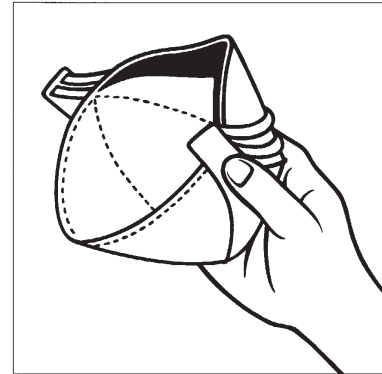

1. The noseclip is located in the top panel. Pre-form the noseclip by gently bending at the centre of the panel. Hold the respirator in one hand and pull out the bottom panel to form a cup.

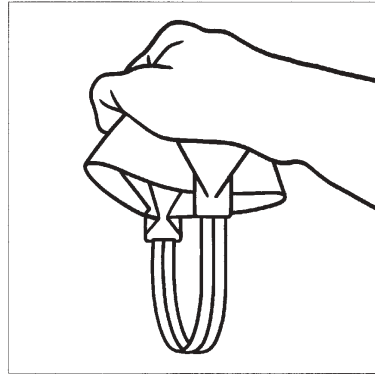


2. Turn respirator over to expose headbands.



3. Cup respirator under chin. Ensure the two straps are separated and pull the straps over the head, one at a time.



4. Locate the lower strap below the ears and the upper strap across the crown of the head. Adjust top and bottom panels for a comfortable fit.

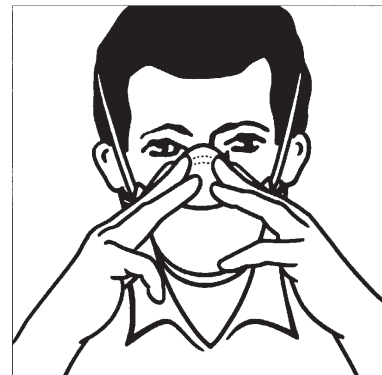

5. Using both hands, mould noseclip to the lower part of the nose.



6. To check fit, cup both hands over the respirator and inhale sharply. If air flows around the nose, re-mould the nosepiece.



## 3M™ 9320 Dust / Mist Respirator



For use in a wide variety of applications requiring FFP2 protection, the 3-panel design allows for increased comfort and for a less claustrophobic feel. Individually packed.

### 3M 9320 Dust / Mist Respirator

Standard: EN149  
Type: FFP2  
Maximum Use Concentration:  
10 x WEL\* for Particulates  
Approval: CE marked

\* Workplace Exposure Limit

This respirator should not be used in oxygen deficient environments, for escape purposes or by people with beards/ facial hair or in atmospheres where concentrations of contaminant may exceed that deemed Immediately Dangerous to Life and Health (IDLH)